



I. Basic Shortcuts

Key Combination	Function Description	Key Combination	Function Description
Fn + Esc	Type •	Shift + Esc	Type ~
Fn + 1	F1	Fn + 7	F7
Fn + 2	F2	Fn + 8	F8
Fn + 3	F3	Fn + 9	F9
Fn + 4	F4	Fn + 0	F10
Fn + 5	F5	Fn + -	F11
Fn + 6	F6	Fn + =	F12
Fn + Del	Insert	Fn + End	Home
Fn + PgUp	PrtSc	Fn + PgDn	Scroll

II. Multimedia Control

Key Combination	Function Description
Fn + Z	Previous Track
Fn + X	Next Track
Fn + C	Play / Pause
Fn + V	Stop
Fn + B	Mute
Fn + N	Volume Down
Fn + M	Volume Up

III. System Functions

Key Combination	Function Description
Fn + Win	Lock / Unlock Win Key
Fn + ALT_R (Right Alt)	Switch between Gaming Mode (custom actuation point) and Office Mode (2mm default actuation point)

IV. RGB Backlight Control

Key Combination	Function	Parameter Description
Fn + T	Turn On / Turn Off Light	Master switch for all LEDs
Fn + Y	Color Switch	Switch colors under adjustable lighting effects
Fn + U	Lighting Mode Switch	Cycle through 18 lighting effects
Fn + F	Brightness -	10 levels, maximum brightness by default
Fn + G	Brightness +	10 levels, maximum brightness by default
Fn + H	Speed -	10 levels, 6th level by default
Fn + J	Speed +	10 levels, 6th level by default
Fn + Tab	Restore Default Settings	Press and hold for 5 seconds; red LED flashes 3 times to complete reset

V. Special Gaming Functions

Key Combination	Function Name	Application Scenario
Fn + Q	Double Keystroke (DKS)	Quick Stop for Counter-Strike
Fn + E	Last Input Priority (SOCD)	Strafing & Quick Stop for Counter-Strike / Valorant
Double Keystroke (DKS) enables faster single-key quick stop, ideal for Counter-Strike. Last Input Priority (SOCD) applies to dual-key quick stop in Counter-Strike and strafing in Valorant. After enabling relevant functions in the driver, you can turn them on or off via shortcut keys or driver switches.		